
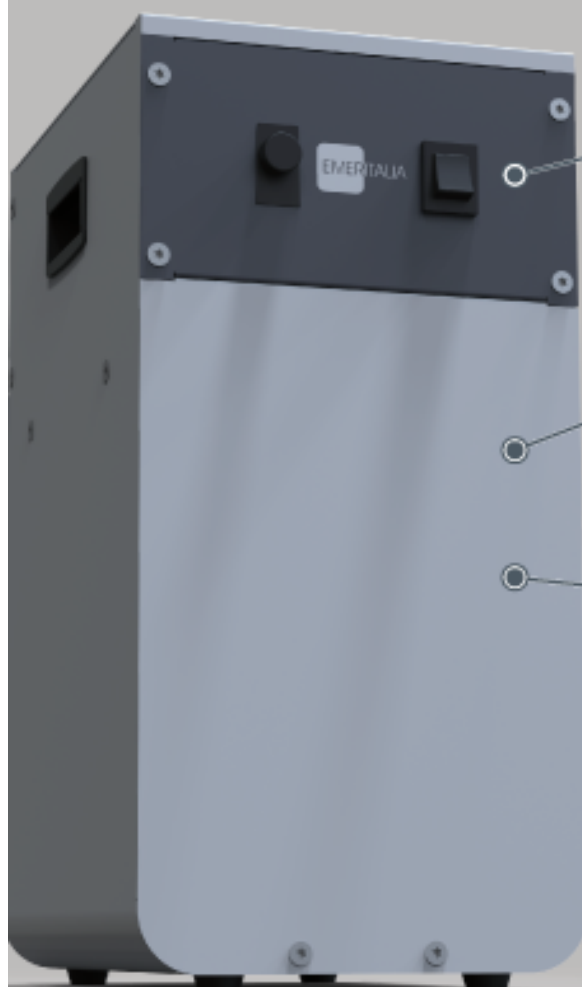


**EMERITALIA****100%**  
Made in Italy  
since 1955


# Labò 2.0 EC DP

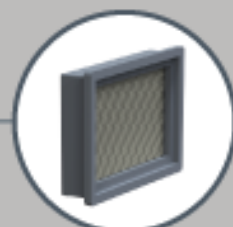

1

Filtro  
in uscita  
HEPAHEPA  
exhaust  
filter

2

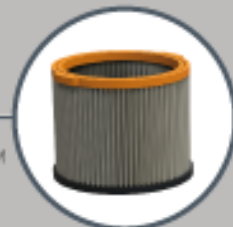Filtro a  
cartuccia  
classe MCartridge  
filter, class M  
certified

3

Installazione  
sotto  
bancoInstallation  
under the  
bench

Unità di aspirazione mobile adatta all'impiego nel laboratorio odontotecnico per l'aspirazione delle polveri di lavorazione e dei residui abrasivi. Collegabile a sabbiatrici, lucidatrici, fresatrici, micromotori, ed utilizzabile con i banchi da laboratorio.

- Sistema di filtraggio a 3 stadi (secco in microfibra, filtro a cartuccia classe M, filtro uscita HEPA)
- Elettronica EMC e presa elettroutensile con sistema di avviamento e spegnimento automatico
- Regolazione della potenza aspirante

Mobile extraction unit suitable for use in the dental laboratory for the suction of dust, abrasives and residues. Connectable to sand-blasters, polishers, milling machines, micromotors and for use in the laboratory bench.

- Filtering 3 stages system (micropor bag, Class M cartridge filter, HEPA exhaust filter)
- EMC control and power-tool socket with automatic start and stop system
- Adjustable power regulation

Modello  
ModelMotore  
MotorDepressione  
DepressionRumorosità  
Noise levelDimensioni  
DimensionPeso  
Weight

EC DP

900 W

1900 mmVHzO

59 dBa max

24 x 31, h 48 cm

15 kg

EC MM DP

900 W

1900 mmVHzO

59 dBa max

24 x 31, h 48 cm

15 kg

Your complete range of dust collectors